



Trigger wheel 158 / 38mm (36)

Trigger wheel for which fits aftermarket ECU to get crankshaft signal.  
Used in conjunction with a Hall or VR sensor connected to the ECU. Mounting of the trigger wheel must be done on the crankshaft pulley / adapter.  
The sensor is then mounted at a distance of about 0.5-1mm to the trigger wheel. The sensor should also be centered on the trigger wheel.

Dimensions:  
Material: Steel  
Teeth: 36-1  
Bolt circle PCD: 53mm